MIDMARK®

Installation Instructions

For 9A147 and 9A20900X Knee Crutch Assembly Used On Models 111 and 119

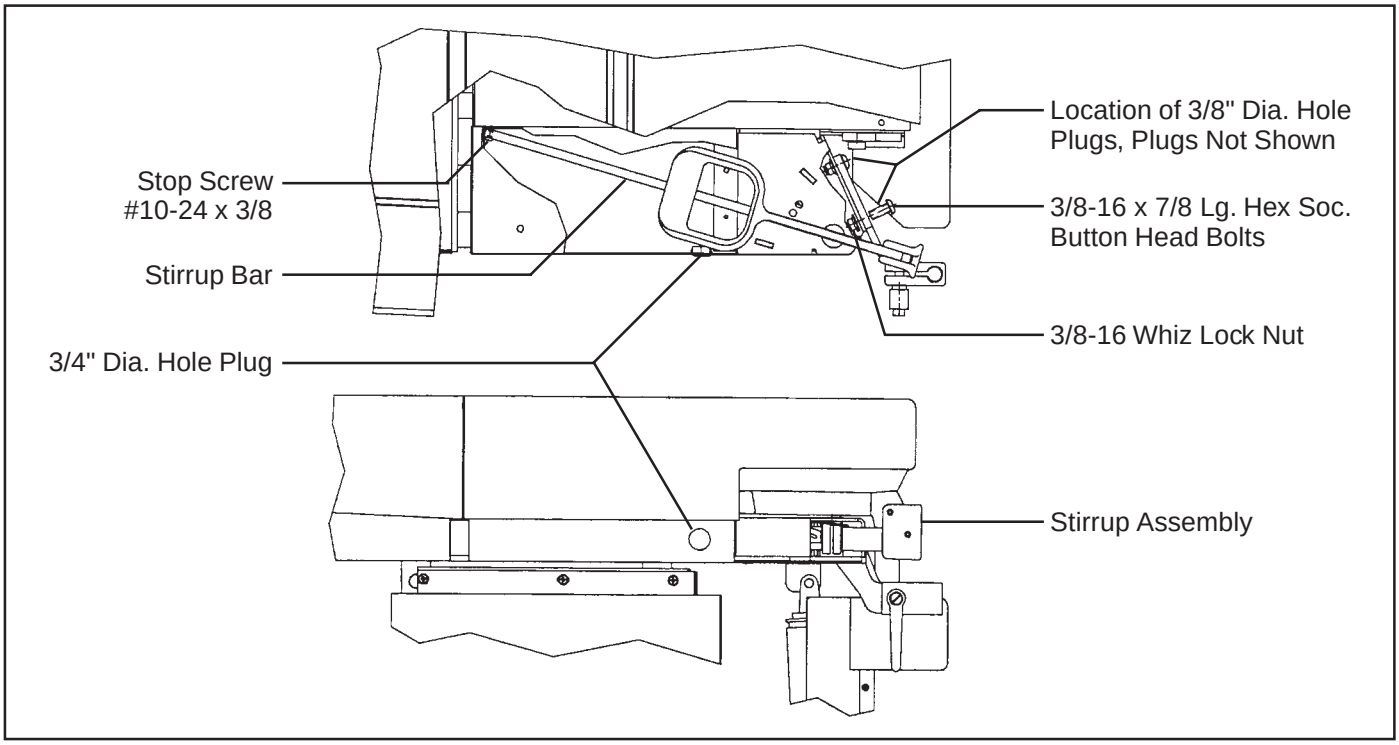
Location of 3/8" Dia. Hole Plugs, Plugs Not Shown
Stop Screw #10-24 x 3/8
3/8-16 x 7/8 Lg. Hex Soc. Button Head Bolts
Stirrup Bar
3/8-16 Whiz Lock Nut
3/4" Dia. Hole Plug
Stirrup Assembly

Installation

1. Remove 3/4" diameter hole plug from access hole, (one on each side of seat).
2. Extend stirrups until stop screw is visible through access hole.
3. Remove stop screw from stirrup bar.
4. The stirrup assembly can now be removed by pulling complete assembly straight out of table.

NOTE
Removal of stirrup assemblies is required to allow access for installation of 3/8 inch-16 whiz lock nut in step #6.

5. Remove 3/8" diameter hole plugs, (two on each side of seat).
6. Position R.H. and L.H. Knee Crutch Support Assemblies to stirrup mounts, as shown. Secure each assembly with two 3/8 inch-16 x 7/8 inch hex socket button head bolts and two 3/8 inch-16 whiz lock nuts, supplied with your kit.
7. Reinstall stirrup assemblies by reversing steps #1 thru #4.

WARNING
Failure to properly reinstall stop screw could result in personal injury.

EQUIPMENT ALERT
Failure to properly reinstall stop screw could result in damage to equipment.

8. Check stirrups for proper operation.

NOTE
Stirrups are not usable with knee crutch support bar in clamps.

9. To ensure clearance of all moving parts run the **Table**, **Tilt** and **Foot** functions through their full stroke.

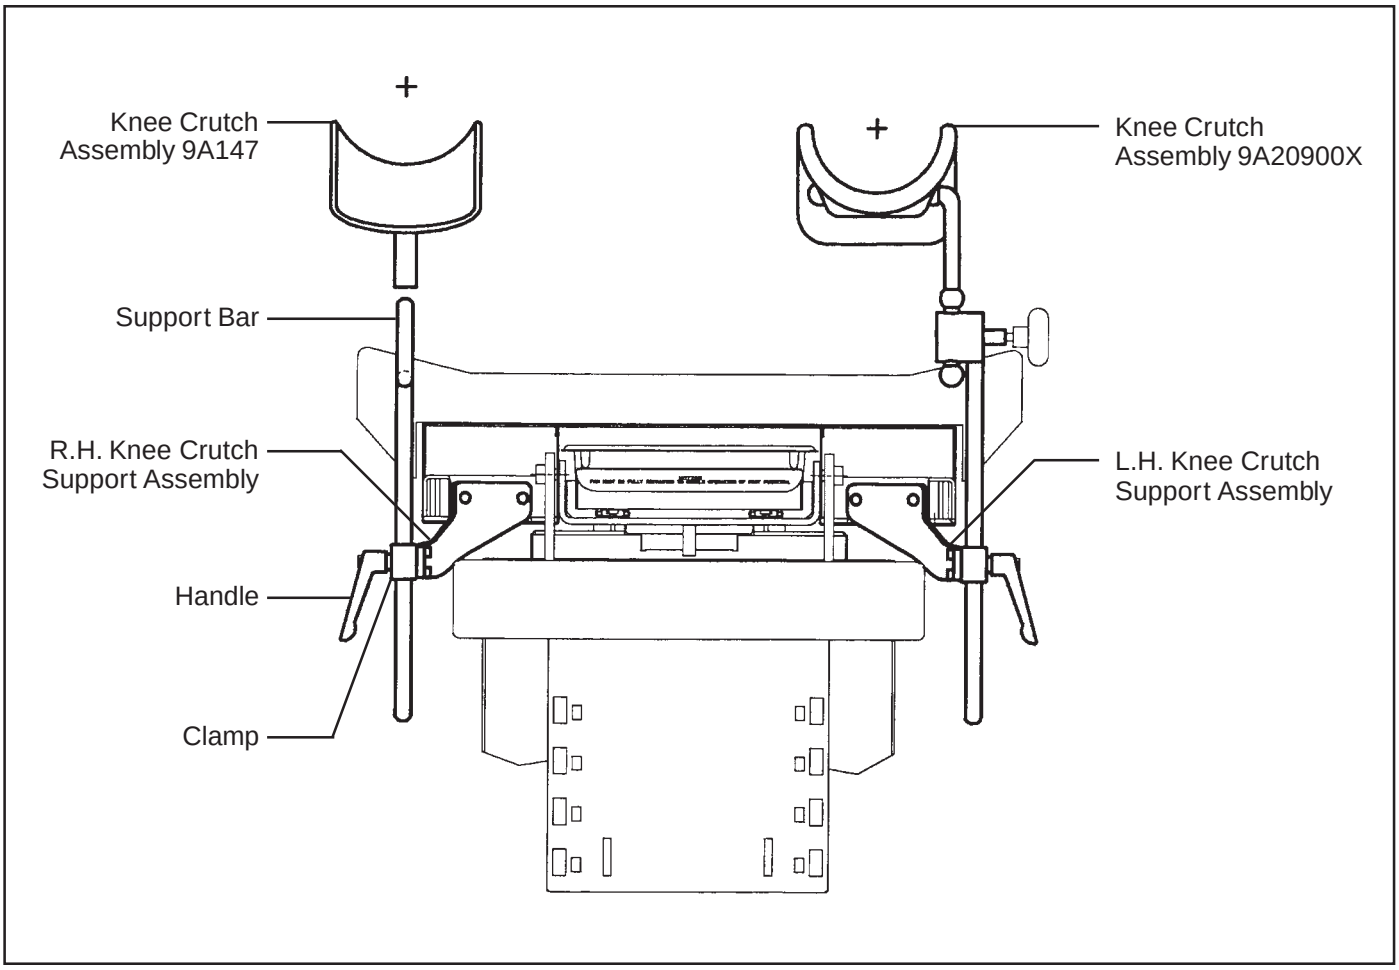

Operation

1. Insert support bar into clamp and mount knee crutch on support bar.
2. Lateral movements are made by rotating knee crutch and support bar. Height is adjusted by moving the support bar up and down. A locking handle clamps the bar to lock crutch in position.
3. To operate handle, pull handle away from table and freely rotate to desired operating position. Release handle, then turn to tighten or loosen clamp.

NOTE
Stirrup assemblies omitted from illustration for clarity, this view only.

© Midmark Corporation - 1995